

Keyfob

1. Appearance

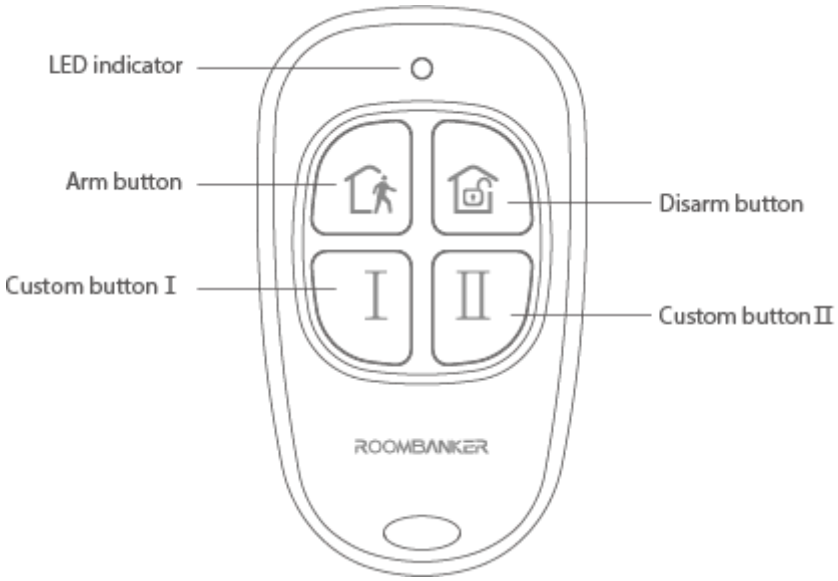

2. Packaging List

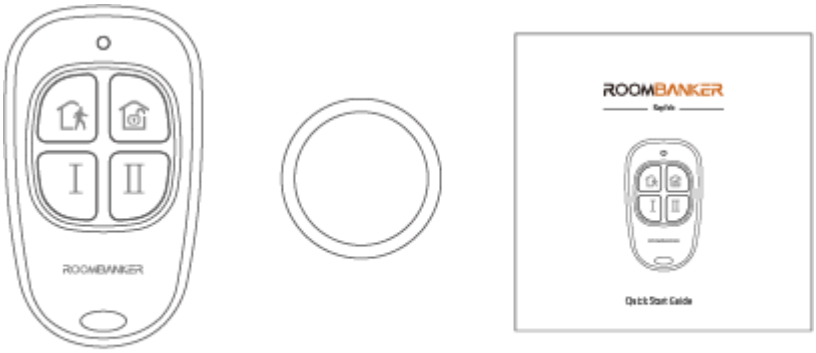


Keyfob ×1 Keychain ×1 QSG ×1

3. Add Keyfob

1. Click Home Security Hub , then click "+" and select "**Add peripheral**" .
2. Pull out the insulation strip to power up the device , the green indicator will flash and the device will show in the App.

   **Note: If the device does not show in the App and green indicator is off , please press and hold " + Ⅱ" for 5s to try again.*
3. Click the "**Done**" to finish adding.
4. Click the "**Associate User**" to associate a specific user.

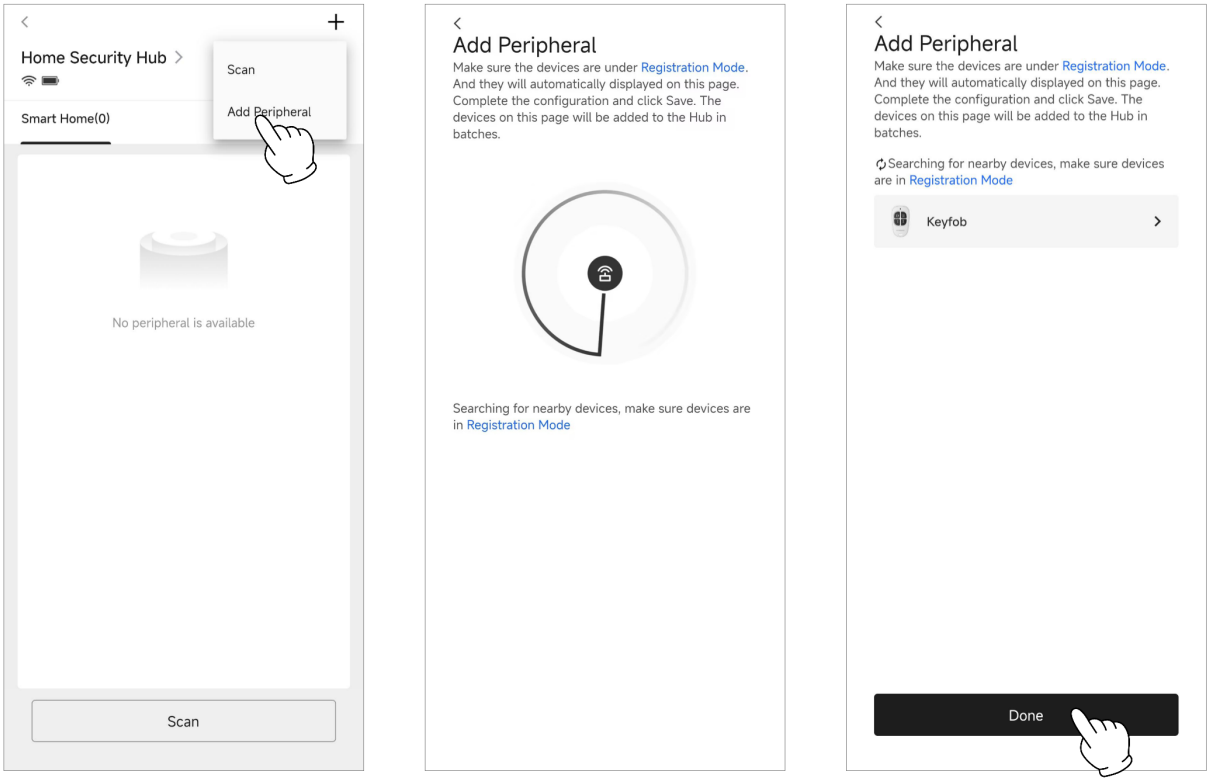

4. Basic Operation

Button	Operation
	Arm
	Disarm
 or	Custom function

Note:

Custom functions can be configured via RB Link.

Successful operation : Green indicator flashes twice .

Failed operation : Red indicator flashes twice .

5. Device Specifications

Parameter	Value
Model	RBCT-KF1
Basic Features	Arm， Disarm，Custom button

Parameter	Value
Transmission Technology	RBF Wireless Transmission
Transmission Frequency	868/915 MHz
Transmission Distance(Open Space)	1200 m
Advanced Tech	AES-128 Encryption， FHSS， TDMA
Power Supply	CR2032 × 1， Up to 5 years (standby mode)
Operation Temperature	-10 °C to +55 °C (14 °F to 131 °F)
Dimension (W x H x D)	59 x 34 x 12 mm
Weight	14.6 g