
Temperature & Humidity Monitor

1. Appearance

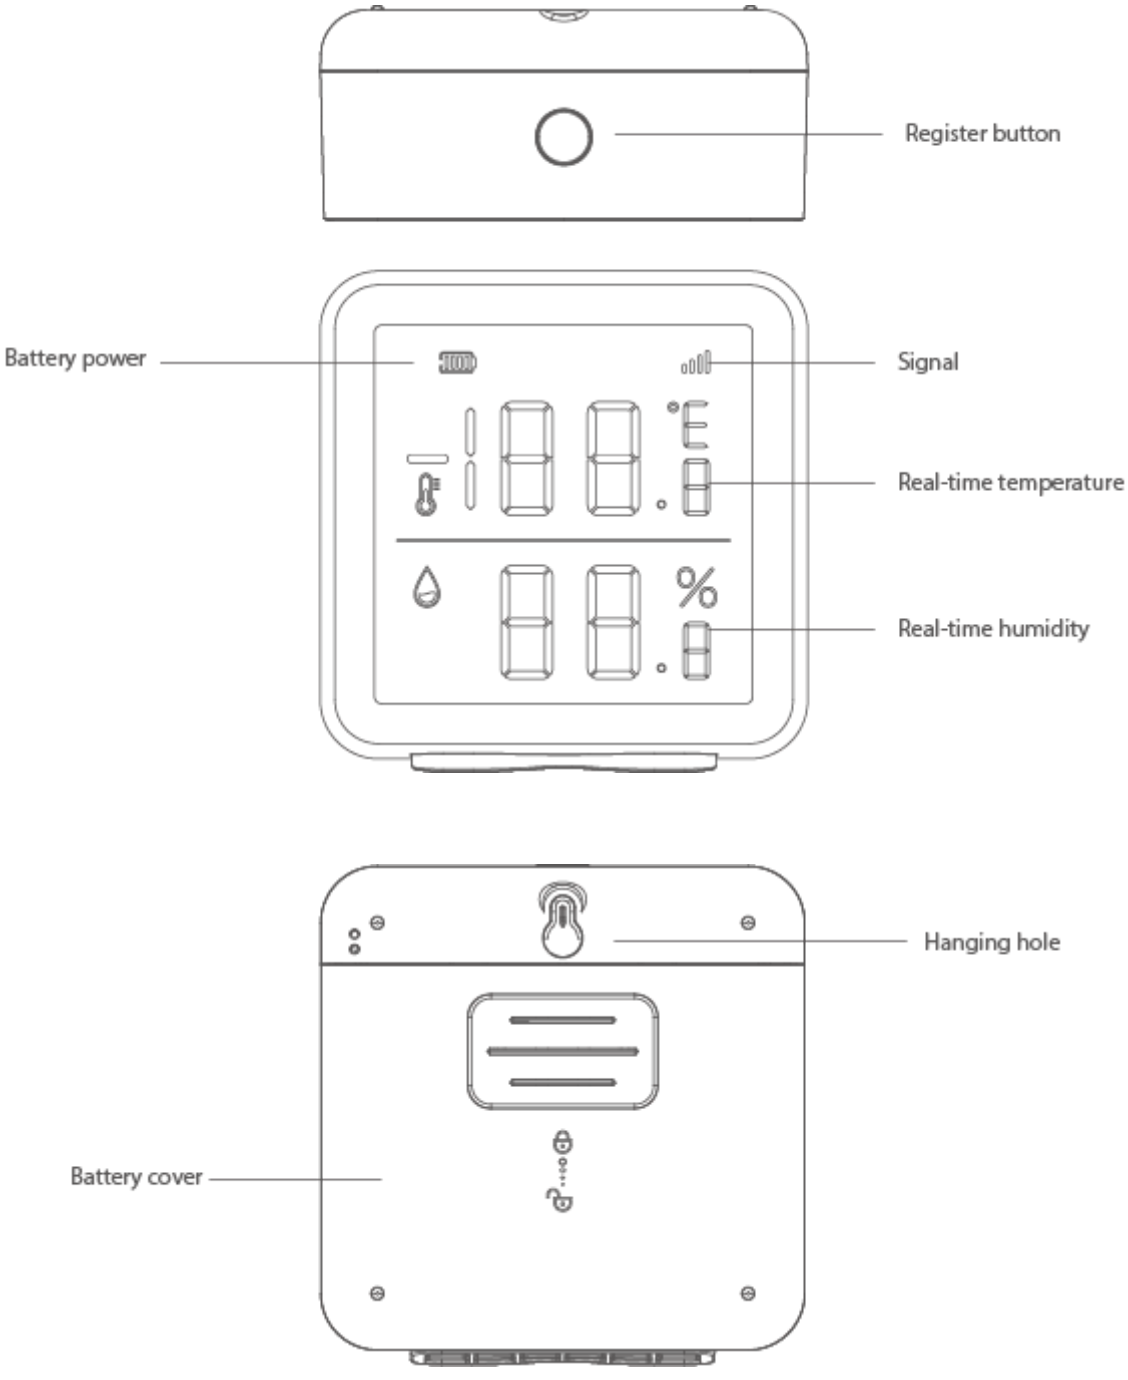

2. Packaging List



Temperature & Humidity Monitor ×1



Mounting screw ×1



QSG ×1




AA battery ×3

3. Add Temperature & Humidity Monitor

1. Click Home Security Hub , then click "+" and select "**Add peripheral**" .
2. Remove the back shell and install the battery to power up the device， the signal bar will start lighting up one by one and and the device will show in the App.


   **Note: If the device does not show in the App and the signal bar is still , please press and hold the register button for 5s to try again.*
3. Assign a room and click the "**Done**" to finish adding.

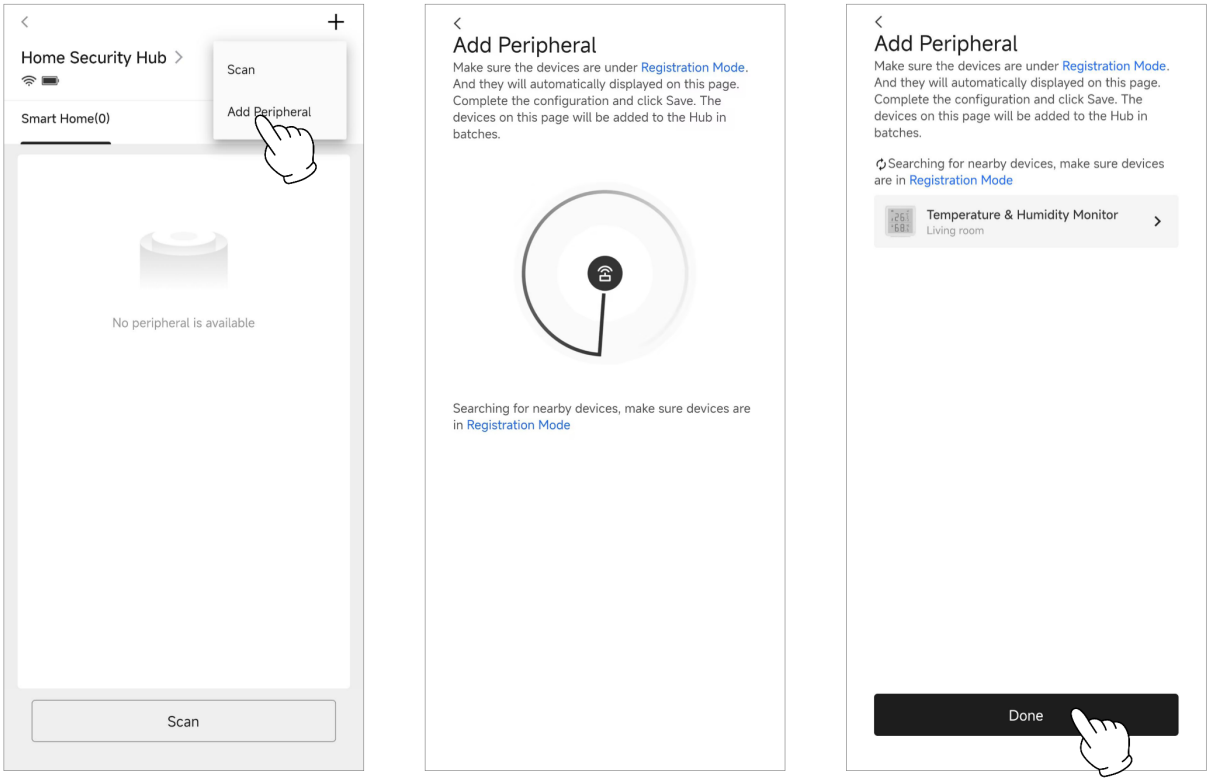

4. Testing Instruction

Signal Strength Test

Click " ⚙ "→ "**Signal Strength Test**"→ " ▶ " to check signal strength.

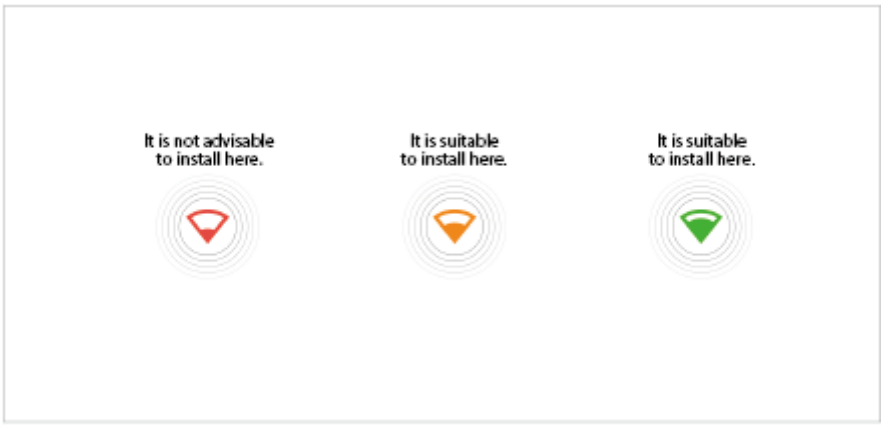

5. Device Specifications

Parameter	Value
Model	RBSS-TH1
Advanced Features	Digital Processing， Signal Strength detection，Find me

Parameter	Value
Transmission Technology	RBF Wireless Transmission
Transmission Frequency	868/915 MHz
Transmission Range(Open Space)	1900 m
Advanced Tech	AES-128 Encryption， FHSS，TDMA
Power Supply	AA Battery× 3，Up to 5 years (standby mode)
Operation Temperature	-10°C to 55°C (14 °F to 131 °F)
Dimension(W x H x D)	64 mm×64 mm×28 mm
Weight	68.5 g
Application Scenario	Indoor