

Keypad

1. Appearance

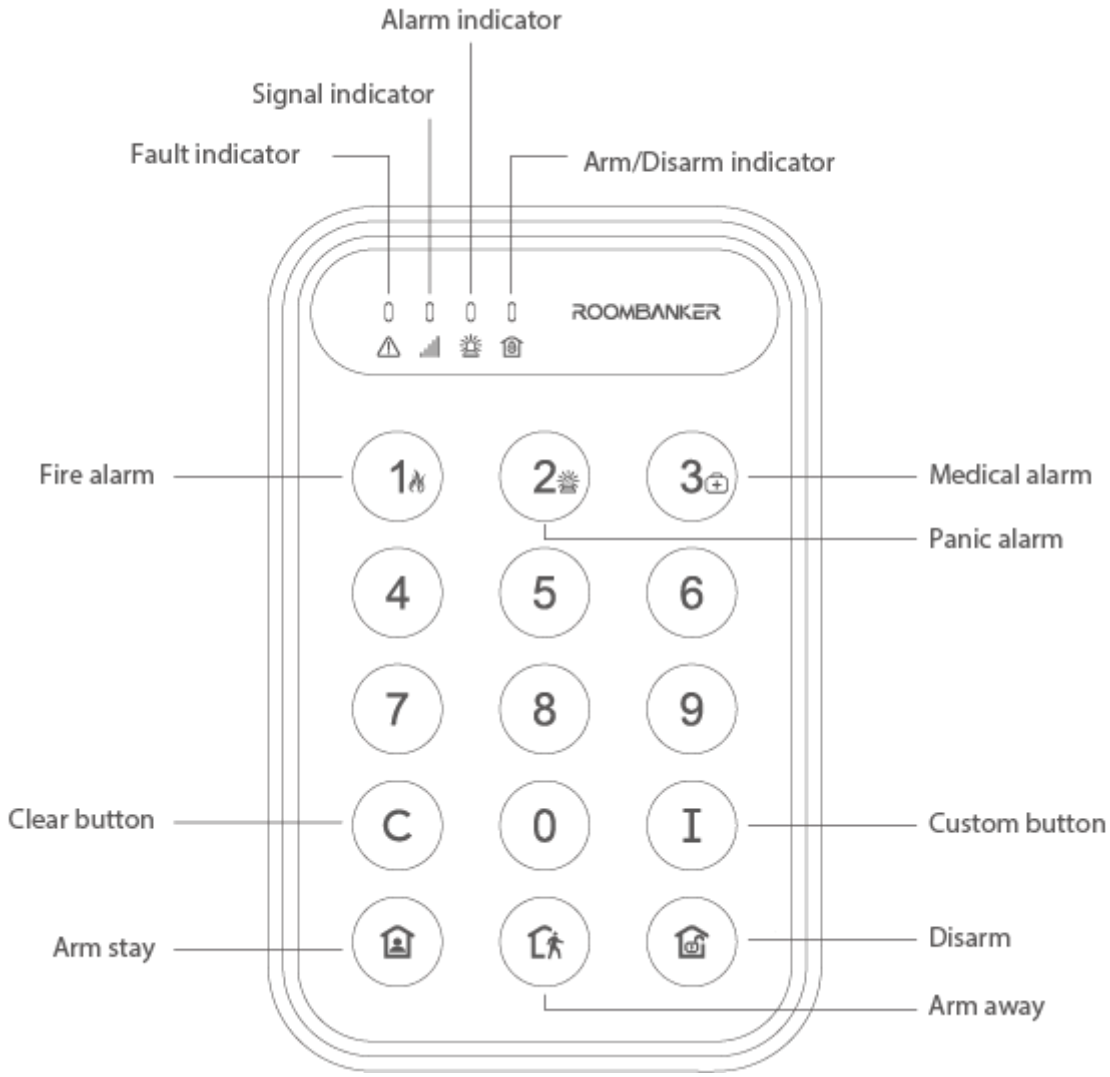


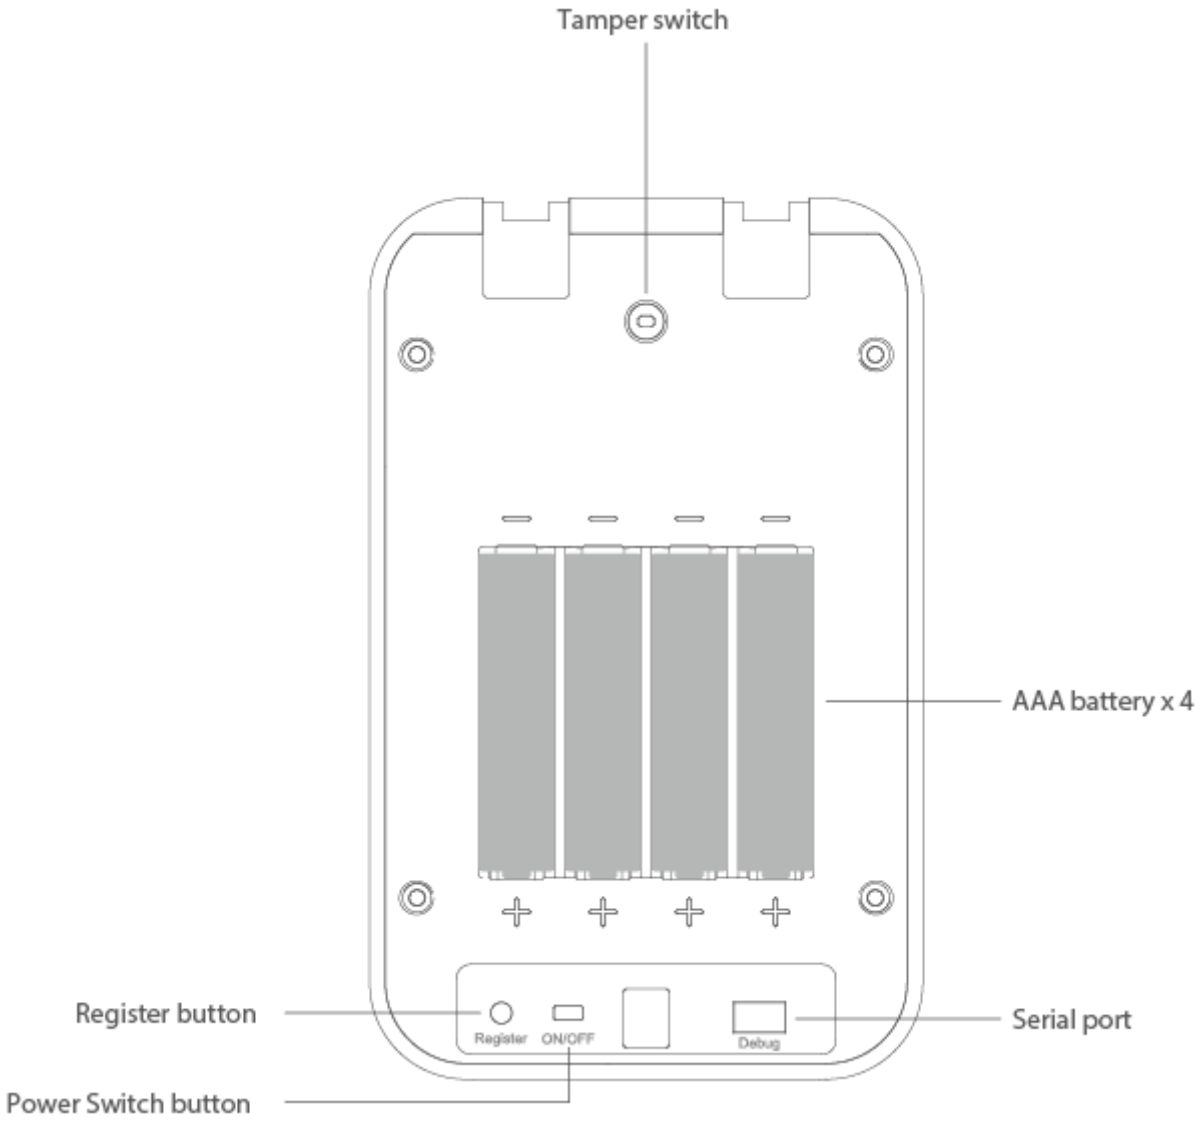


2. Packaging List



Keypad ×1

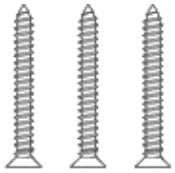

Mounting screw ×3

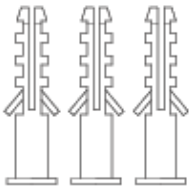

Plastic expansion tube ×3



3M adhesive strip ×1



QSG ×1


3. Add Keypad


1. Click Home Security Hub , then click "+" and select "**Add peripheral**" .
2. Switch on to power up the device , the green indicator will flash and the device will show in the App.


   **Note: If the device does not show in the App and green indicator is off , please press and hold the register button for 5s to try again.*



3. Assign a room and click the "**Done**" to finish adding.

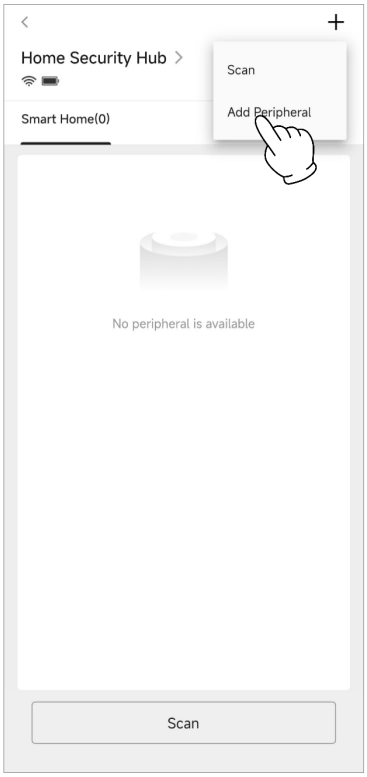

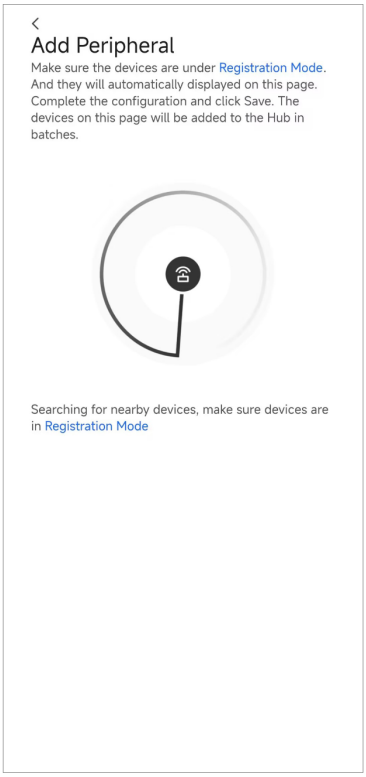


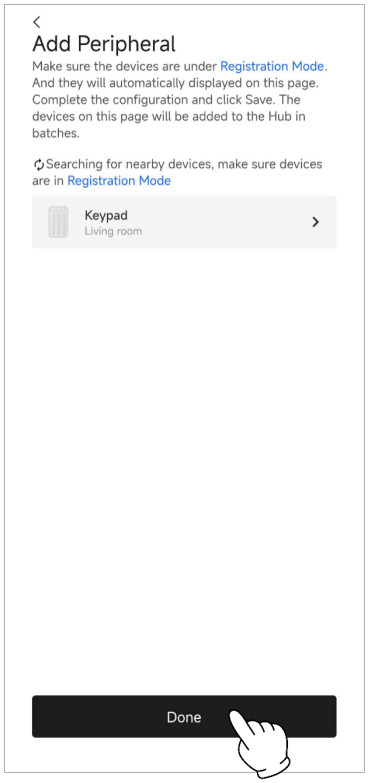

4. Testing Instruction


Signal Strength Test

Click " " "→ "**Signal Strength Test**"→ " " to check signal strength.

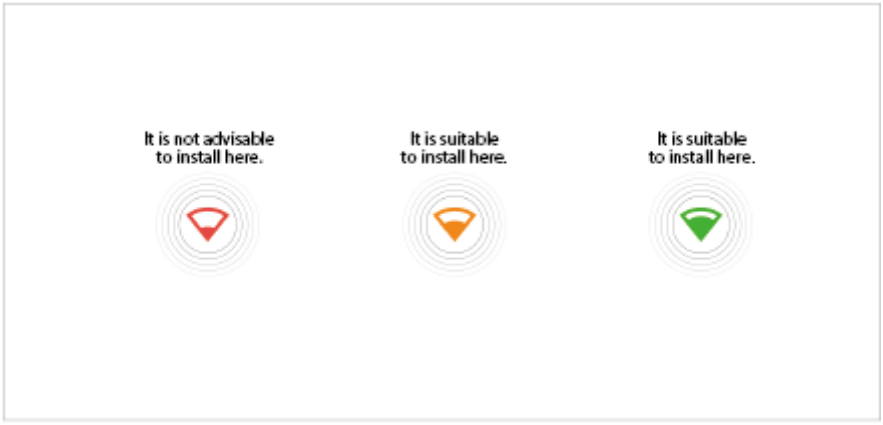


5. Installation Instruction

Mount on the wall by screws

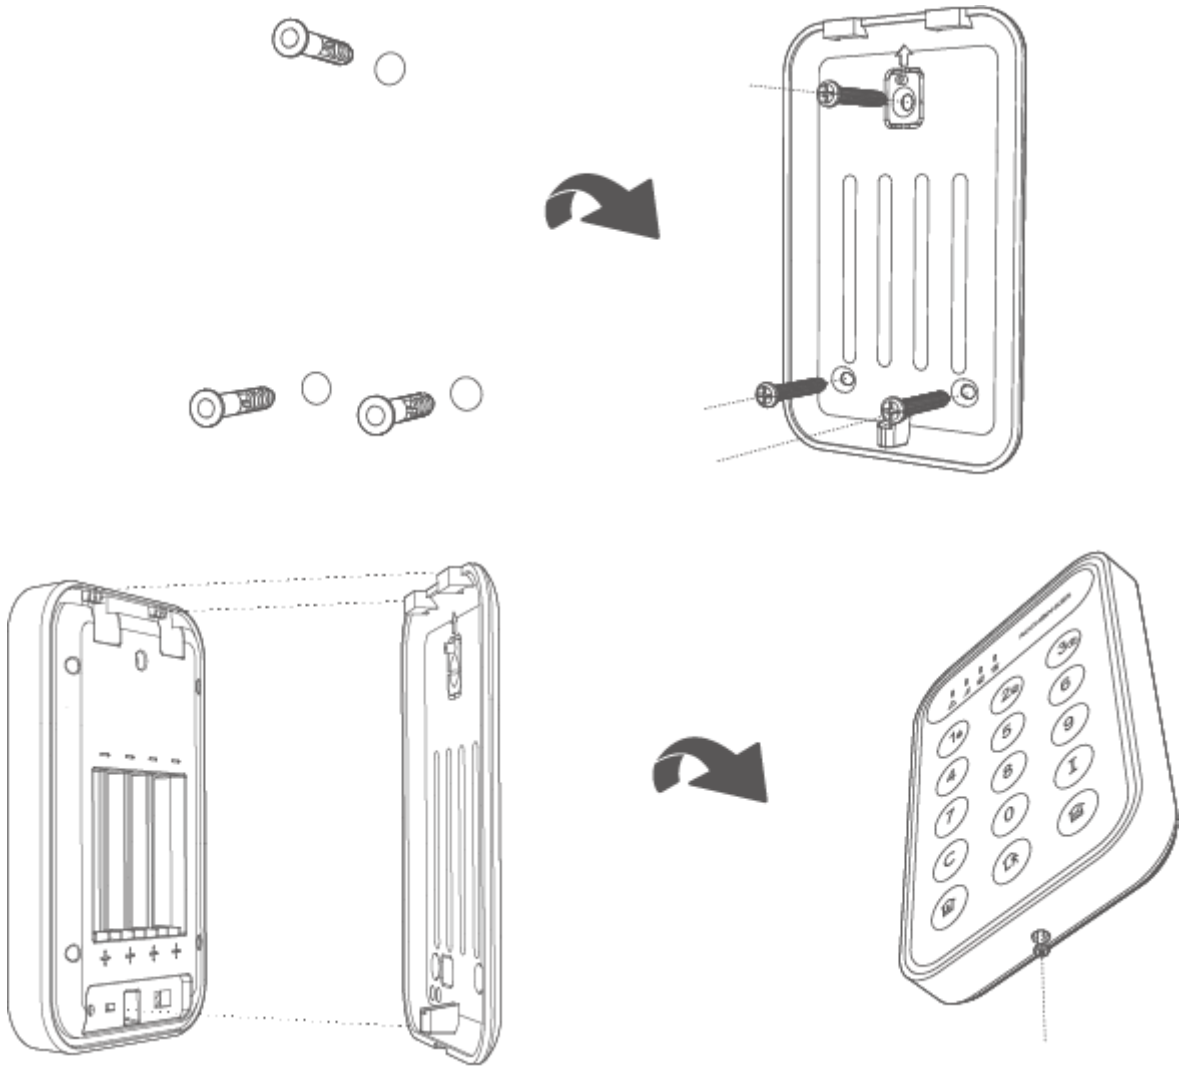

Mount on the wall by 3M adhesive strip

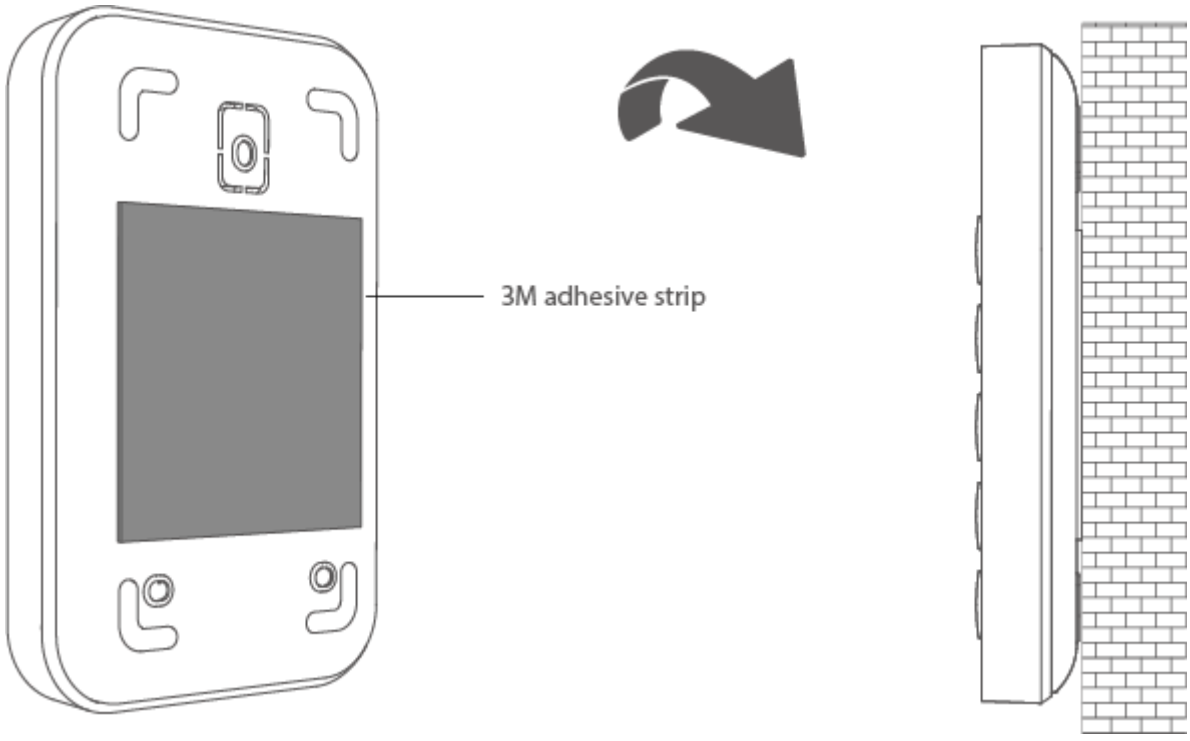

6. Basic Operation

Button	Operation	Successful Operation
PIN code +[/]	Arm	Blue indicator will turn on
PIN code +[ ]	Disarm	Green indicator will flash twice
Duress code +[ ]	Duress silent alarm	Green indicator will flash twice
PIN code +[ ]	Custom function	Buzzer will beep twice

Note:

PIN code can be configured via RB Link.

Failed operation : Buzzer will beep three times

7. Device Specifications

Parameter	Value
Model	RBCT-KP1
Advanced Features	Signal Strength detection,Find me
Tamper Protection	Rear
Transmission Technology	RBF Wireless Transmission
Transmission Frequency	868/915 MHz
Transmission Range(Open Space)	1900 m
Advanced Tech	AES-128 Encryption， FHSS， TDMA
Battery Type	Four AAA batteries，Up to 5 years (standby mode)
Operation Temperature	-10°C to 55°C (14°F to 131°F)
Installation Method	Screw /Adhesive
Dimension(W x H x D)	140 mm x 86 mm x 22 mm
Weight	170 g